



INTEGRATED SYSTEMS AND CONTROL, INC.

User Manual

PCM100

INTEGRATED SYSTEMS AND CONTROLS, INC.

PCM100 Users Manual V2.0a


© Integrated Systems and Control, Inc.
PO Box 7682, Auburn, CA 95604
Phone 530-878-9038 • Fax 530-878-9137
Revised 3/28/2001

Table of Contents

General	3
Specifications	4
Installation	9
Operation	10
Service	13

General

To bring the advantages of the PCM400 technology to smaller systems, we have developed the PCM100 system. The PCM100 shares the programming, logging and communications features of the PCM400 with a lower I/O count and a built-in low cost Modem. It is comprised of a single board that contains the microprocessor and memory, the I/O and contains the screw terminals required to connect all the field wiring to the board.

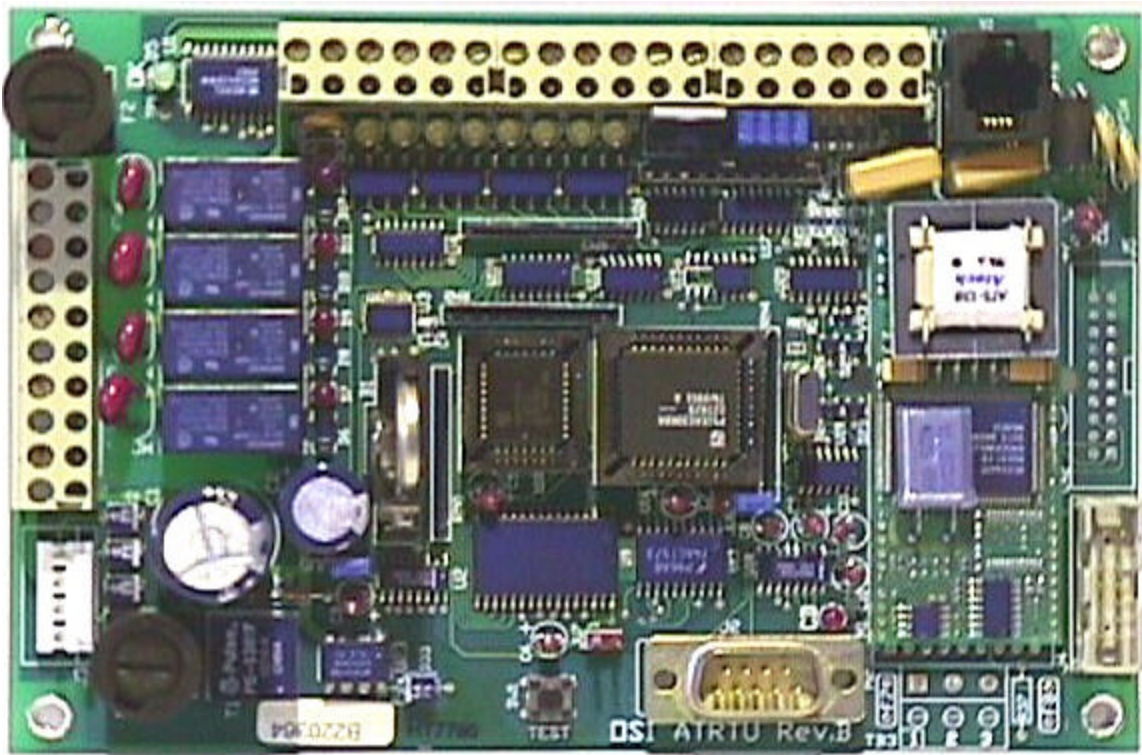

Specifications

Board Size: Height = 4.25", Width = 6.2", and Depth = 2.25" (including it's plastic track mounting..

Input Power: 36VAC transformer (w/center tap) is used to provide power. The recommended transformer is the Signal Transformer, DP241-6-36. The input power is fused (F1) at 0.4 Amps (SloBlo). The IDC connector for termination of power is an AMP #640426-4. Connections are made to this connector using manual or powered tools to ensure proper connections.

Output Power: Terminals are provided on the PCM100 Board for providing 24VDC and 5VDC power for external sensors. This 24vdc output is limited to a maximum current of .25 amperes and the 5VDC output is limited to a maximum of 40ma. The 24VDC power is unregulated and may vary in voltage from 29VDC to 23VDC, depending on load and line voltage.

Analog Inputs: The PCM100 board set has terminals for 4 analog inputs which may be used as either 0-5VDC, 0-20ma, 4-20ma, or 10K Thermistor temperature inputs. A board jumper may be used to connect the input to a 250 Ohm 1% resistor for 0-20ma or 4-20ma inputs. These analog inputs have an input impedance of 30K Ohms and a maximum of 5VDC voltage range. The board's A/D converter resolves the input voltage to 10 bits or 1 out of 1024. For an input of 5VDC, each resolved bit represents 4.88 millivolts. When used in the real world, you can expect an accuracy of, + or -, 2 bits in good conditions. Each analog channel is sampled and averaged over 4 control scan periods to produce the value used by user programs. The A/D converter is uni-polar, meaning that it only measures positive voltages, 0-5VDC.

Digital Inputs: The PCM100 board has 8 digital inputs (DI#1 thru DI#8) which are self-powered from the 24VDC power such that only a contact closure is required to activate them. Screw terminals on the board are provided for connections.

Digital Outputs: The PCM100 board has 4, normally open relay outputs, designed to switch a maximum of 1.0 amp at 230VAC. The maximum relay life will be attained when driving contactors that require 8 Watts or less holding power. Fuse F2 protects the outputs and is rated at 5A.

Serial Port #1, MODEM: The PCM100 Board is equipped with an on-board 2400 Baud MODEM. Connection to the phone line are made by J1, a standard RJ11 phone connector.

Serial Port #2, RS232: The PCM100 Board contains a serial port that can be used as a service laptop computer interface port. The board contains a 9 pin (DB9 type connector (J2) that, with a “Null Modem” cable adapter, can be connected to a laptop computer.

Installation

Installation Considerations

The power supply wiring between the PCM100 board and the transformer should be kept as short as possible. Technically, the boards power supply could float such that the RET ground conductor need not be connected to the earth ground. The only exception would be if sensors or other connected equipment external to the board will cause the RET conductor to be grounded, it would be better to ensure that RET is grounded at a known point near the board. The on-board heatsink is designed to cool the 5VDC logic supply regulator and it gets hot to the touch!. Care must be given to ensure that wiring does not lay against this heatsink.

The Analog Inputs may be configured to accept 0-5VDC or 4-20ma type sensors. In addition, a Precon III, 10K, thermistor may be connected for temperature measurements. A Thermistor sensor should be connected between 5VDC Thermistor Power and the Analog input terminal (with the 4-20ma jumper removed). As always, the wiring to analog sensors should be kept away from other switching and power lines to ensure good analog accuracy.

The Digital Inputs are powered such that a connection made through a field dry contact closure between the DI terminal and one of the RET terminals will cause the corresponding LED to light and activate the logical input signal. The inputs are powered by 24VDC and must not be connected to AC voltages of any value.

The Digital Outputs are relay contact closures with one side of each contact connected to a common conductor. These outputs are rated for voltages not to exceed 230VAC and intended to operate 8 Watt or smaller loads for the maximum relay contact life. Each relay output is a Normally Open contact (a Normally Closed type contact is not available). The common conductor is fused.

PCM100 Summary of Connections

The following tables define the function of each of the PCM100's connections:

Connectors:

TB1 (Input Terminations)

- 1 - AI#1
- 2 - AI#2
- 3 - AI#3
- 4 - AI#4
- 5 - IRET
- 6 - IRET
- 7 - 5VDC sensor power supply (40ma max).

- 8 - 24VDC power (0.25A max).
- 9 - DI#1
- 10 - DI#2
- 11 - DI#3
- 12 - DI#4
- 13 - DI#5
- 14 - DI#6
- 15 - DI#7
- 16 - DI#8
- 17 - RET
- 18 - RET

TB2 (Output Terminations)

- 1 - DO#1 (NO relay contact, common side to TB2-5).
- 2 - DO#2 (NO relay contact, common side to TB2-5).
- 3 - DO#3 (NO relay contact, common side to TB2-5).
- 4 - DO#4 (NO relay contact, common side to TB2-5).
- 5 - Common

J1 (MODEM, RJ11 Telephone Connector)

- 1 - n/u
- 2 - n/u
- 3 - TIP
- 4 - RING
- 5 - n/u
- 6 - n/u

J2 (Serial Port #2, RS232)

- 1 - n/u
- 2 - RX DATA (input)
- 3 - TX DATA (output)
- 4 - DTR (output)
- 5 - COM
- 7 - RTS (output)
- 8 - CTS (input)
- 9 - n/u

J3 (Power Input Connector)

- 1 - 18VAC (one leg of 36VAC transformer secondary).
- 2 - 18VAC (one leg of 36VAC transformer secondary).
- 3 - AC/DC RET (center tap of 36VAC transformer secondary).
- 4 - Optional Battery backup input (12VDC to 24VDC, approx. 0.15A).

J4 (future use)

J5 (future use)

Jumpers used to configure the PCM100 Board for hardware related features:

JU1 - AI#1 input range, Removed = 5vdc or Thermistor, Installed = 4-20ma.

JU2 - AI#2 input range, Removed = 5vdc or Thermistor, Installed = 4-20ma.

JU3 - AI#3 input range, Removed = 5vdc or Thermistor, Installed = 4-20ma.

JU4 - AI#4 input range, Removed = 5vdc or Thermistor, Installed = 4-20ma.

JU5 - Install to enable the battery support for the memory. Remove for shipment.

JU6 - If installed, the PCM100 will always answer the phone. Normally removed.

Installation Topics

Scaling Analog Inputs

When scaling a sensor, the minimum/maximum scaling values must be calculated. The minimum and maximum scaling values entered into the Analog Input Definition represents the values that are represented when 0 volts and 5 volts, respectively, are measured at the analog input terminal. The simplest method to calculate the proper scaling values for typical sensors are shown below in several examples.

Example 1:

A 4-20ma liquid level sensor is to be scaled. The sensor operates over a range of 0 to 15 feet of liquid, where 4ma=0 feet and 20ma=15 feet. The simplest way to scale a 4-20ma sensor is to take the range of the sensor, divide it by 4, then subtract the result from the 4ma sensor value.

V4 = level value at 4ma sensor output

V20 = level value at 20 ma sensor output

Minimum Scale Value = $V4 - (V20 - V4)/4 = 0 - (15 - 0)/4 = 3.75$ feet

Maximum Scale Value = $V20 = 15.0$ feet

Example 2:

A 0-5VDC voltage type liquid level sensor is to be scaled. The sensor operates over a range of 0 to 15 feet, where 0.7 volts=0 feet and 4.2 volts=15 feet. Note that voltage sensors are not neatly calibrated at the factory for standard voltage values. The calculations required are as follows.

M = slope of voltage vs depth in volts per feet (or inches or whatever)

Vdry = voltage output of the sensor when removed from the liquid.

Vx = voltage at some known depth, Dx.

Dx = some known depth at which Vx can be recorded (usually sensor maximum).

Minimum Scale Value = the minimum value to enter into PCM100's definition.

Maximum Scale Value = the maximum value to enter into PCM100's definition.

$M = (Vx - Vdry)/Dx = (4.2 - 0.7)/15 = 0.23$

Maximum Scale Value = $(5.0 - Vdry)/M = (5.0 - 0.7)/0.23 = 18.7$ feet

Minimum Scale Value = $-Vdry/M = -0.7/0.23 = -3.0$ feet

Operation

PCM100 Operation and Programming

The idea behind the PCM100 design is to combine the programming features of the PCM400 Masters with reduce hardware and more flexible packaging. The following paragraphs describe the main differences between the PCM100 programming and the PCM400A's.

Programming considerations of the PCM100

The firmware revision of the PCM100 is currently **V1.00**. The development of programs must be done with the appropriate (v1.00x) Simulator software. Programs written for the PCM400A WILL NOT directly load into an PCM100 board or Simulator program without significant changes.

The MAILBOX concept is different from that of the PCM400. In the PCM100, the Mailbox #1 is designed to be used as a "PHONE-HOME" mailbox. This means that this Mailbox will be used to direct the call out to the host monitoring site on a monthly basis. This scheduling can be accomplished one of two ways. Using the Simulators Mailbox Definition screen, the Mailbox can designate either a Point to enable the Mailbox or a "Phone-Home" Date and Time specification can be directly entered into the Mailbox definition. If the Date/Time, "Phone-Home" specification is used, a particular day of the month (MM/DD/YY format or 1-L|DOW|MTH format may be used) can be specified and a particular time of the day specified. By default, the PCM100 will install the Mailbox #1 specifying that "1|MON|*" (meaning the First Monday of every Month) as the Date and "1:30" as the Time. The PHONE-HOME Mailbox is designed to allow a regular access for monitoring purposes. The Host Monitoring Software will be able to specify certain logs for automatic retrieval at the next PHONE-HOME event.

Programming an PCM100 board is a two step process. Once the operating program has been developed using the Simulator software, it must be "LOADED" into the PCM100 board using a "Load Programming" function of IWATCH, ILISEN or COS. This first step establishes that this program is now operating in the board. The second step is to SAVE this new operation program into the PCM100's backup memory device by performing a "BSV" command in command mode or by performing a "Save to Backup" function using the full screen mode. Important: The act of Loading a program into the PCM100 does not automatically update it's backup memory device. This is done to allow the testing of a new program without the loss of the original, which can be restored at any time.

The Unit ID String is new to the PCM100. It's purpose is to describe in a way that the Host software can recognize easily, the unique identification of a particular PCM100 board panel. The ID String may be up to 15 characters long. It is suggested that the first few characters identify a specific customer or a specific development. For instance, if a customer named "Global Environmental" is monitoring and servicing a number of PCM100 equipped panels, they should be given an ID such as "GEAT00001" through "GEAT99999", where the "GE" identifies the customer/service company, "AT" identifies the panel as PCM100 based. This unique ID string is sent to the Host, or other, monitoring software during the regular PHONE-HOME event, which will quickly identify what panel is reporting.

Operational considerations of the PCM100

A new IWATCH, version 2.54C+, must be used to access the PCM100's.

A new ILISTEN, version 1.00G+, must be used to access the PCM100's.

The intended operation of the PCM100 is to initiate a callout periodically to a monitoring site. It is rarely, if ever, intended to auto-answer the phone line. For testing purposes, the jumper JU6 is used to, when installed, force the PCM100 to always answer the phone line. When the JU6 jumper is removed, the PCM100 will only be able to callout, except that the user may press the "TEST" button on the board, which will instruct the PCM100 to answer the phone line for the next 5 minutes. If the TEST button is pressed, it must be held down for at least one scan time (2 seconds by default). The Serial Port #2 (connected to J2) must be disconnected for the auto answer options to work properly. The ISAC program "ILISTEN" is intended to receive the regular calls from the PCM100's.

For testing purposes, there two special diagnostic functions that can be accessed at power up time. First, with JU6 removed, and the TEST button pressed during power up, the board firmware will perform a program clear and clear all the logs. The second function is accessed by installing JU6, and pressing the TEST button during power up. This is a special board diagnostics mode. If a terminal or laptop is connected to Serial Port #2, a "TESTMODE>" prompt will be issued. Currently, the only commands in the Test Mode are the "MEM" and "RET" commands. The MEM command performs a RAM memory and EPROM memory test. At the conclusion of the test, the prompt will be printed again. To exit the Test Mode, enter the command "RET", which will return to normal PCM100 operation after clearing all the logs. If a valid program is present in the PCM100 backup memory, the user may reload it using the BRS command or via the MENU command and selection "R" on the full screen menu.

During normal operation, the "OK", green colored LED light, will blink at a rate of one second on, one second off. This blink will stop when performing program loads and unloads.

When the PCM100 is set to answer with it's Modem or when a user connects directly to the board with a laptop computer, the PCM100 responds with a "ATRTU PASSWORD>" prompt. If the user incorrectly types the logon command, the board will respond with

“Password ERROR” and repeats the prompt. The correct logon command is “LOGN,{name},{password}” then press the Enter key. The “name” is a alpha character string of 15 or less characters. The “password” is a numerical character string of 15 or less characters. The default factory name and password that is installed when the user performs a “Clear All Programming” function in the Simulator program, is name=’rtu’ and password=’123’. Other passwords may be added and the default name/password may be changed by using the Simulator program.

Once the user has logged on to the PCM100, the unit responds with a “Logged On” message and changes the prompt to “ATRTU>”. From this “ATRTU>” prompt, there are a number of commands that may be typed into the PCM100. Some of the commands are designed for use only with the IWATCH, ILISTEN, and COS programs. A list of the available commands are shown below.

Command Mode Command Summary

"BRS" Command

The BRS command causes the current operating program to be replaced by the program saved in the backup EEPROM memory device. The syntax is “BRS”(Enter). There is no response if successful, an error message is printed if a problem is detected.

"BSV" Command

The BRS command causes the current loaded operating program to be saved into the backup EEPROM memory device. The syntax is “BRV”(Enter). There is no response if successful, an error message is printed if a problem is detected.

"CAL" Command

The CAL command causes the entire Alarm Log to be cleared. The syntax is “CAL,0”(Enter). The unit will respond with “Log Cleared”.

"CAT" Command

The CAT command causes the entire Activity Log to be cleared. The syntax is “CAT,0”(Enter). The unit will respond with “Log Cleared”.

"CML" Command

The CML command causes the entire Maintenance Log to be cleared. The syntax is “CML,0”(Enter). The unit will respond with “Log Cleared”.

"COM" Command

The COM command is used for monitoring certain values for diagnostic purposes. It is not used at this date. The syntax is “COM”(Enter).

"COS" Command

The COS command is used to clear the Optimizer Logic history table. The syntax is "COS,x"(Enter), where 'x' is the Optimizer number.

"CUL" Command

The CUL command is used to clear one or all of the User Logs. The syntax is "CUL,x"(Enter), where 'x' is '0' to clear all logs, or is 1-16 to clear that particular log#. The unit will respond with "Log Cleared".

"DIE" Command

The DIE command is only used when the user wishes to completely reset the unit as though a power failure has occurred (a power failure will be recorded in the Alarm Log). The syntax is "DIE"(Enter).

"IDN" Command

The IDN command is used to display the unit ID character string. The syntax is "IDN"(Enter).

"LOGN" Command

The LOGN command is used to log on to the PCM100 board and gain access to the interface. The syntax is "LOGN,{name},{password}"(Enter), where "name" and "password" are character strings that have been defined for the particular PCM100 being accessed. If the log on is accepted, the unit will respond with "Logged On", else an error message will be printed.

"MENU" Command

The MENU command changes the interface from that of a prompted command/response to a full screen interactive interface. The syntax is "MENU"(Enter).

"RAL" Command

The RAL command is used only by the IWATCH, ILISTEN and Host software.

"RAT" Command

The RAT command is used only by the IWATCH, ILISTEN and Host software.

"RET" Command

The RET command is used only by the IWATCH, ILISTEN and Host software.

"REV" Command

The REV command returns the current firmware rev and the last date of program modification. The syntax is "REV"(Enter).

"RML" Command

The RML command is used only by the IWATCH, ILISTEN and Host software.

"RUS" Command

The RUS command is used only by the IWATCH, ILISTEN and Host software.

